Physical Cutter Setup



Table of Contents

- 1. Cutter/Vinyl Setup
- ◆ 2. Loading the Blade
- ◆ 3. Carriage Setup



1-1 Cutter/Vinyl Setup

- Plug in the power cable on the left side of plotter, then the other end into a wall outlet.
- Move the power switch to the '|' position to turn it on.





1-2 Cutter/Vinyl Setup



 The plotter will go through a short memory test, then display the speed and force on the screen.



1-3 Cutter/Vinyl Setup

 Loosen the tension on the pinch rollers by pulling the lever toward you. (When facing the front of the machine)



1-4 Cutter/Vinyl Setup

 Slide the pinch rollers left by pushing them while in the up position.





1-5 Cutter/Vinyl Setup





- The rollers can be placed in several different patterns.
- Be sure to place the rollers directly above the wheels on the main plate.



1-6 Cutter/Vinyl Setup

- Place the vinyl roll on top of the two roller bars.
- When bringing the vinyl up into the cutter, it should have the color side facing up.







1-7 Cutter/Vinyl Setup



- Insert the vinyl underneath the pinch rollers.
 - A minimum of two pinch rollers are necessary to keep the vinyl moving straight through the cutter.
- Bring the vinyl forward at least one inch past the blade to ensure smooth cutting.
- The pinch roller pressure is adjustable depending on how far the lever is pulled.



2-1 Loading the Blade



- The cutting blade is the piece that actually cuts the vinyl. The depth of the blade is adjustable in the holder and is important to get set correctly.
- Start by removing the blade holder and a blade from the packaging.



2-2 Loading the Blade





- Remove the rubber cover from the blade.
- The side with that cover is the side that will be facing out when putting the blade into the holder.
- Push the pin on the top of the blade holder in, and push the blade into the holder all the way until it stops.



2-3 Loading the Blade






- The brass ring is used to adjust how far the silver cover moves in order to adjust how far the blade sticks out.
- The blade should stick out no more than the width of a credit card.



2-4 Loading the Blade

- Once the blade is properly adjusted, insert it into the carriage clamp on the cutter.
- Press the blade holder down until the ring is flush with the clamp.
- Tighten the horizontal screw to keep the blade holder in.

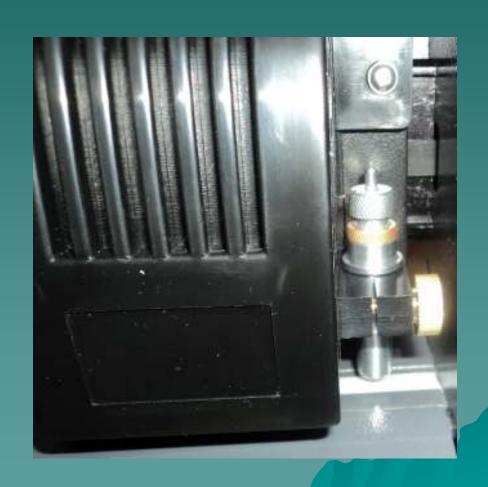



3-1 Carriage

- The carriage runs from right to left on this machine.
- Always start the carriage on the right hand side of the area you wish to have cut.
- If the carriage is not far enough to the right when starting the cut, it can hit the left side, rendering the cut incomplete.
- If this happens, the cut will have to be started over from scratch.



The End

Please review our tutorials for more information on particular features.

http://www.cutterpros.com/downloads for further information. To speak with a technician, submit a ticket at http://www.cutterpros.com/support/ or call 888-828-8776 x227

CutterPros.com/Hahn Ventures LLC is NOT liable for any software/attachments/instructions/download links/content contained in this presentation. Use the contents of this presentation AT YOUR OWN RISK. CutterPros.com/Hahn Ventures LLC is NOT responsible for any damages incurred to your computer hardware/software or any possible viruses/Trojans/malware or any other type of damaging programs that may be contained in the links and/or attachments. It is your responsibility to verify the contents before using any of the information contained in this presentation. By using the contents in this email you agree to hold CutterPros.com/Hahn Ventures LLC harmless of all liability and damages. You agree that you are totally responsible for what you put on your computer, software you install on your computer and files you download to your computer.

